

PARTS MANUAL

ICE 335 PP/RF

Power pack

Model	:	335RF010
From Serial no.	:	335PR25007 onwards
Manual no.	:	335RF040
Date of issue	:	November 2003
Revision no.	:	C




TABLE OF CONTENTS

PAGE

• POWER PACK HOUSING	2
• INTERNAL	4
Assembly	4
Adapters.....	8
• DRIVE PUMP	12
• DRIVE MANIFOLD	14
• CLAMP/RF MANIFOLD	16
• HYDRAULIC HOSES	18
• CONTROL PANEL	24
• REMOTE CONTROL	26
CABLE	26
WIRELESS.....	28
• HYDRAULIC CIRCUITRY	30
Drive manifold	30
RF manifold.....	32
• ELECTRICAL CIRCUITRY	34

POWER PACK HOUSING

   335RF0A0

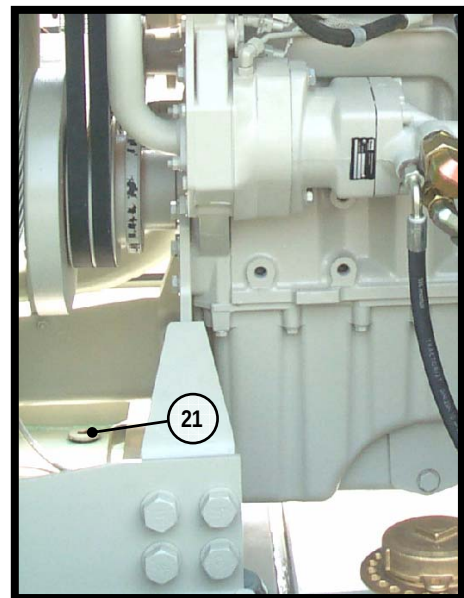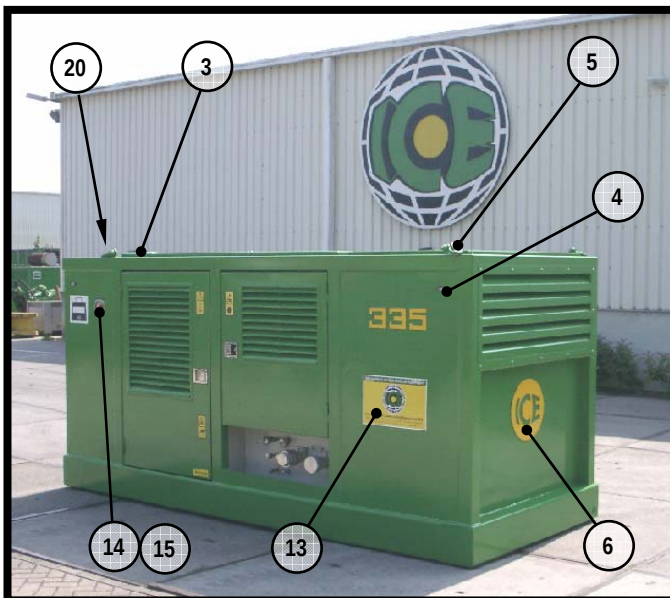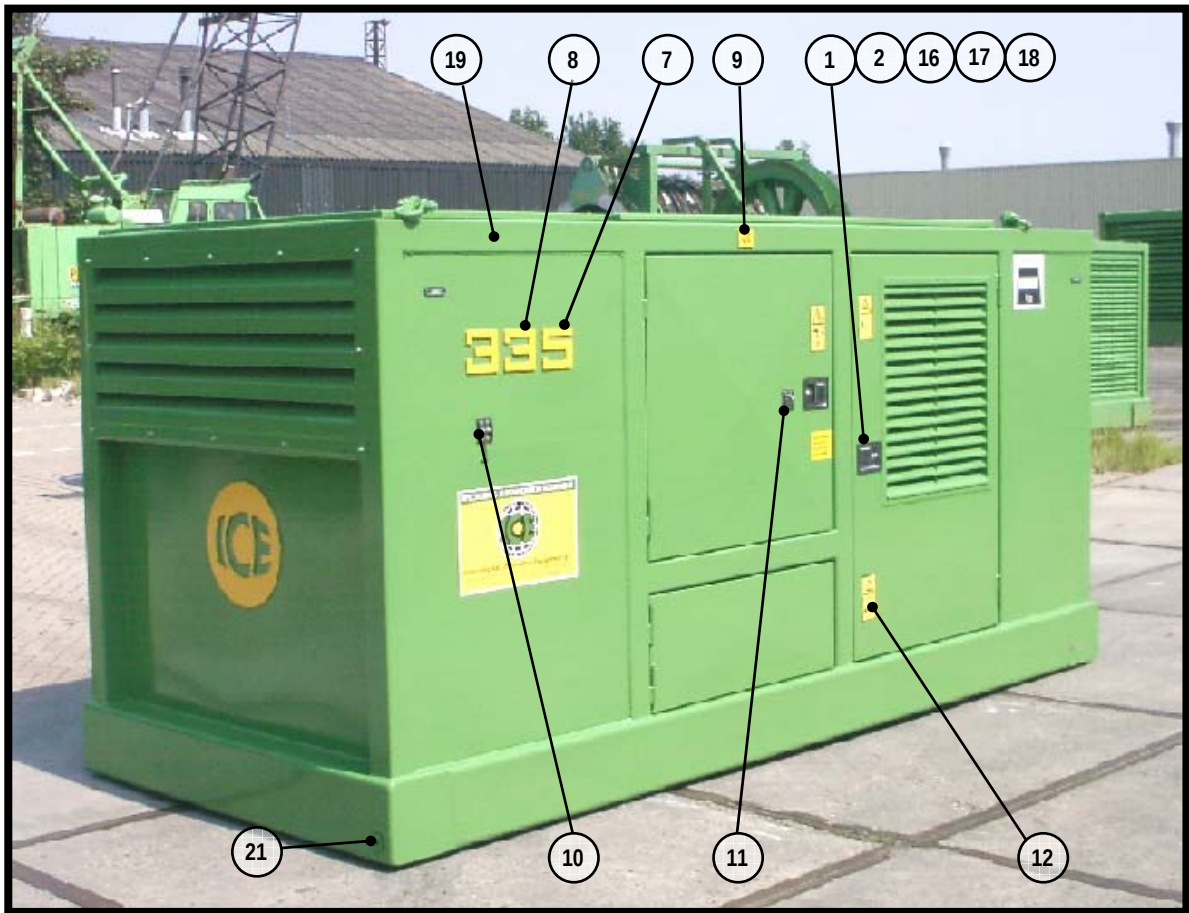

POWER PACK HOUSING

335RF0A0

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	
1	4	Door lock (complete)	0201051
2	4	Door hook	0201052
3	1	Exhaust silencer	0211045
4	4	Clamp light skid	0303030
5	4	H-shackle	0306036
6	1	Logo "ICE"	400.277
7	2	Logo "2" small (124x124)	9211104
8	4	Logo "3" small (124x124)	9211105
9	1	Logo "CE"	9412103
10	1	Door hook RVS	9501013
11	1	Door hook holder RVS	9501014
12	1	Stickers "CE"	9504202
13	1	Sticker LOGO	9805050
14	1	Emergency stop camber	0305013
15	1	Emergency stop button	0305014
16	1	Door lock key	0201053
17	4	Door lock cilinder	0211058
18	4	Gasket	0212002
19	1	Skid 335 PP/RF	0306201
20	1	Rain cap	110.695






ADAPTERS

335RFA50

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part No.</u>
21	5	FITT2P-20S	791.107

INTERNAL Assembly

     335RF0B0

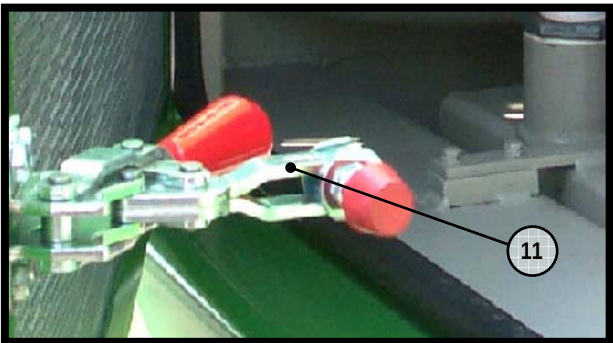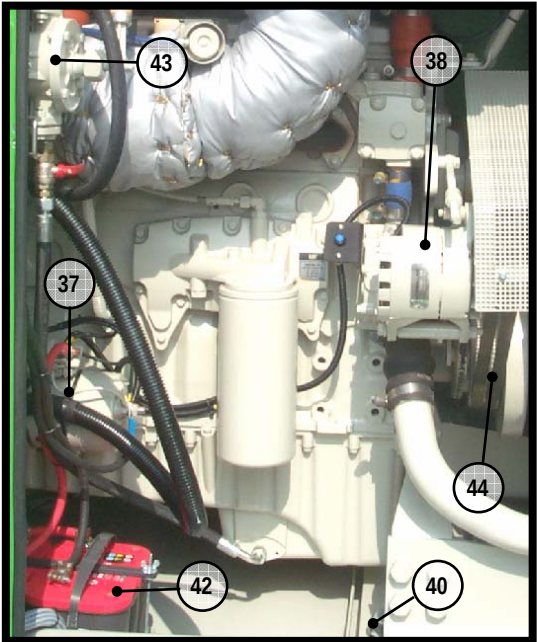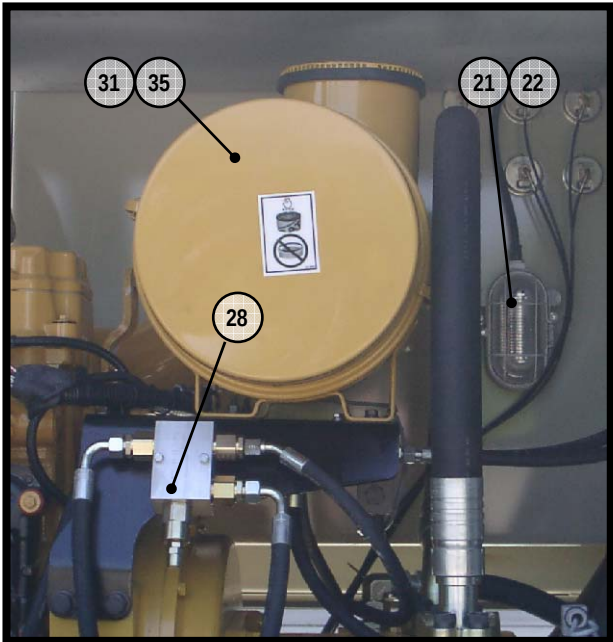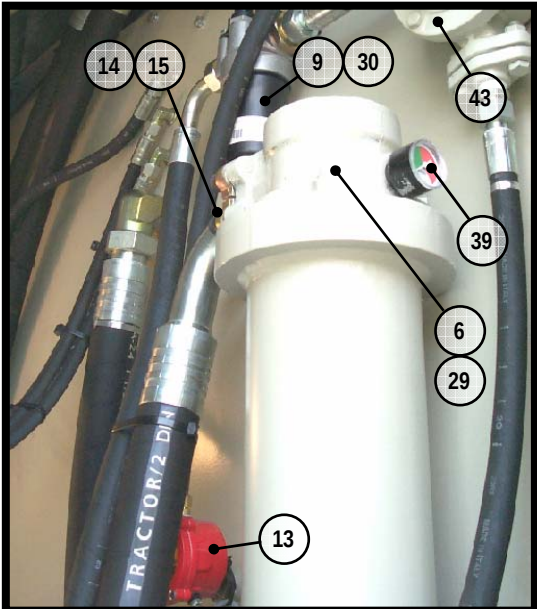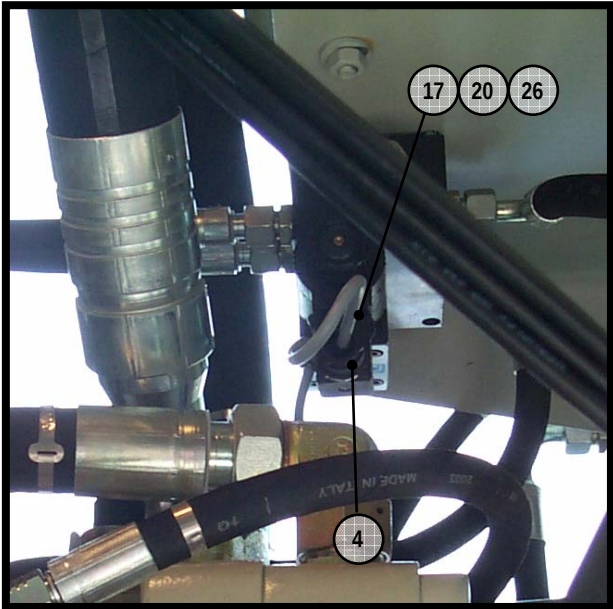

INTERNAL




Assembly

335RF0B0

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part No.</u>
1	1	Limit switch	0012003
2	1	limit switch lever	0012004
3	1	Limit switch element	0012005
4	1	Pin bushing (4 pins)	0105013
5	2	Heat exchanger	0211046
6	1	Return filter	0211059
7	1	Fuel filler cap 3"	0303014
8	1	Mounting flange 3"	0303015
9	1	Return filter	0304010
10	1	Exhaust expansion joint	0304032
11	1	Door latch	0305004
12	1	Butterfly valve	0305006
13	1	Float switch	100.314
14	4	SHCS M12 x 40	100.505
15	1	O-Ring #228	140.233
16	1	Welding flange	790.472
17	4	SHCS M5 x 50	790.500
18	1	Fuel level meter	790.593
19	1	S/N plate	9110014
20	1	4/2 Valve	9501040
21	2	Bully	9507005
22	2	Bulb	9507006
23	4	Elbow flange	9507035
24	1	Flex. coupling	9612024
25	2	Temperature switch	9810044
26	1	Mounting plate complete	9906043
27	1	Clamp pump	9911004
28	1	Relief valve (complete)	9911008
29	1	Return filter element	0211064
30	1	Filter element	0304011
31	1	Secondary air filter	0002016
32	1	Diesel engine	0207009
33	1	Water separator element	0307023
34	1	Fuel filter	0307024
35	1	Primary air filter	0307025
36	1	Oil filter	110.998
37	1	Starter motor	0311002
38	1	Alternator	0311004
39	1	Indicator	0311001
40	4	Motor support	9601026

INTERNAL Assembly

   335RF0B0

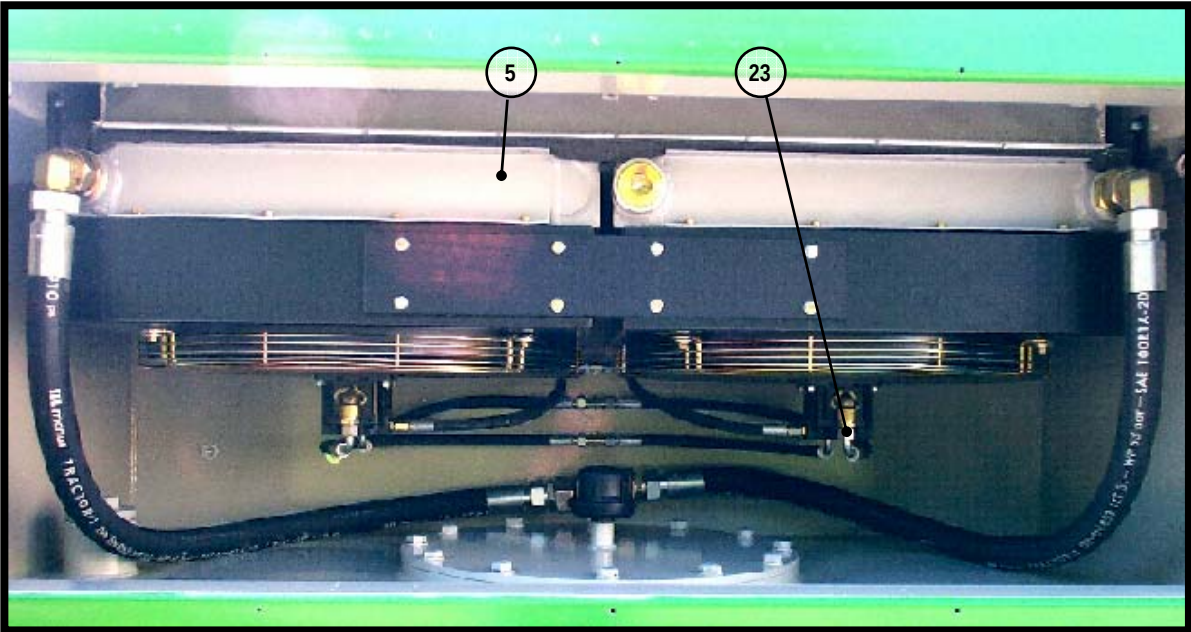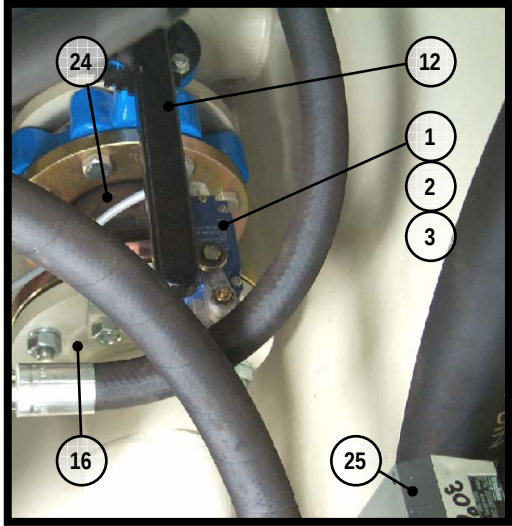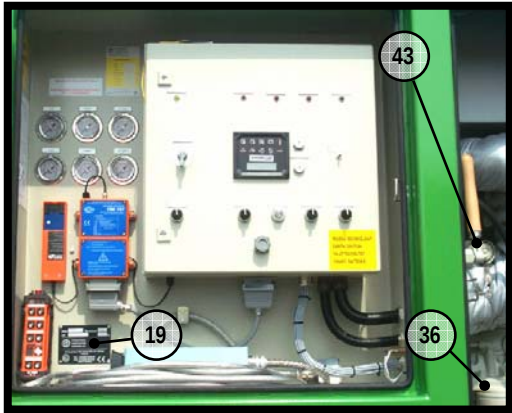

INTERNAL







Assembly

335RF0B0

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part No.</u>
41	1	Coolant level sensor	0307009
42	2	Battery	9704002
43	2	Manual pump	9909009
44	1	V-belt set	0311006
45	1	Pick up sender (not shown)	0307011

INTERNAL Adapters

      335RFB50

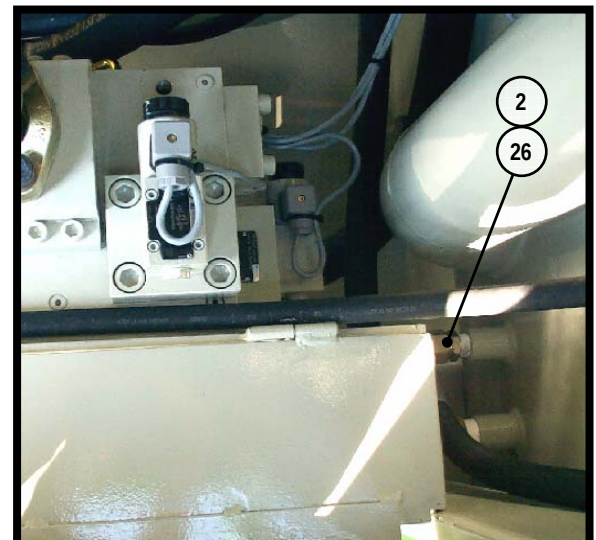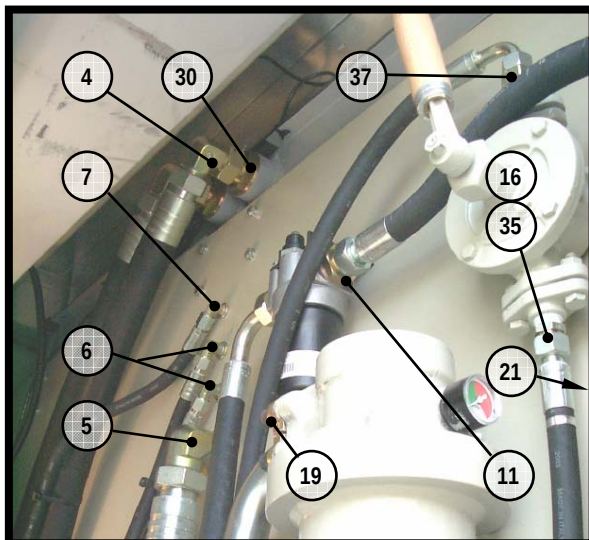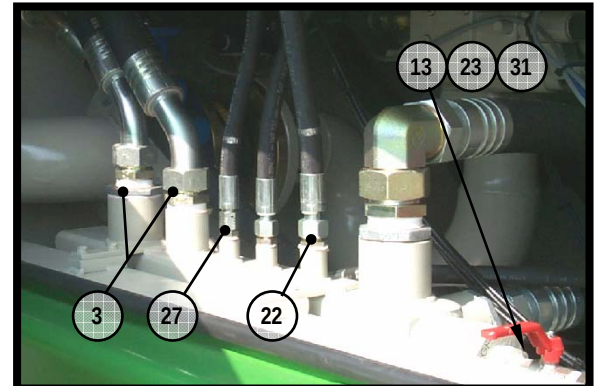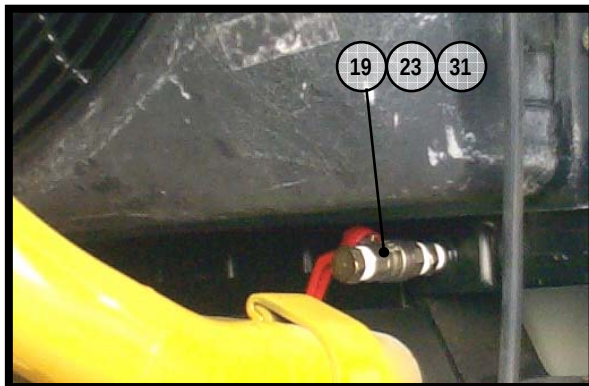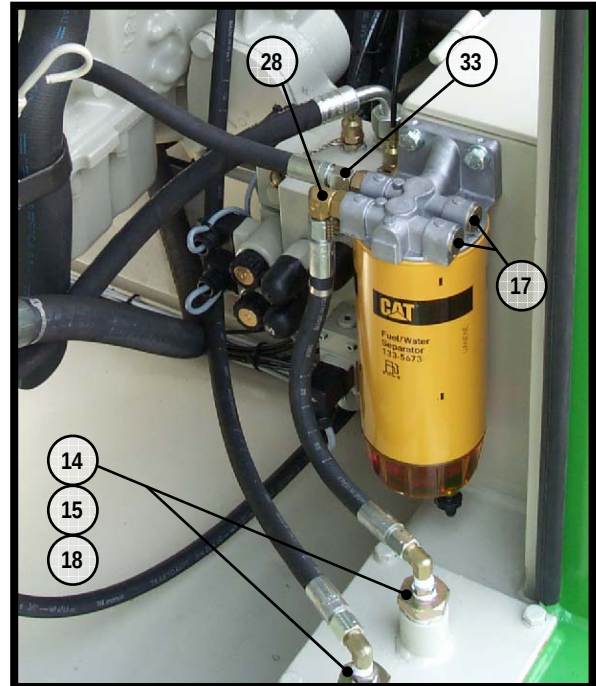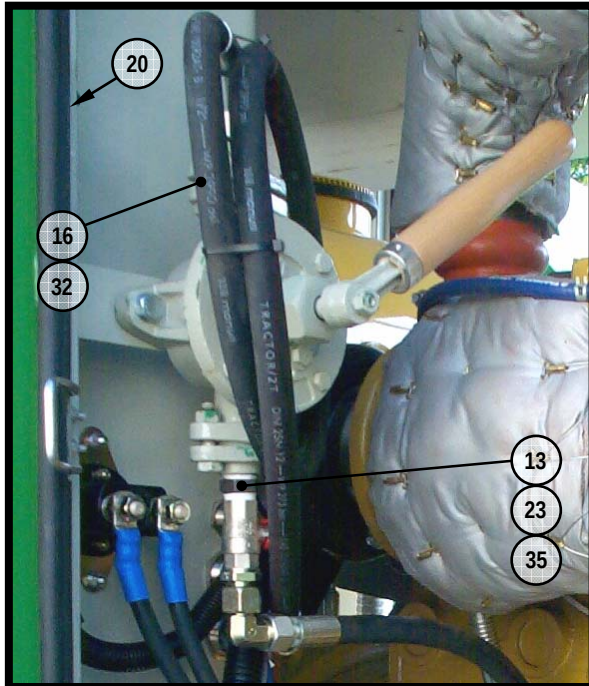

INTERNAL




Adapters

335RFB50

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part No.</u>
1	1	FITT9T-16A16V16A	0005058
2	2	FITT9L-30A30V	0005073
3	2	FITT9S-20P45A	0204002
4	4	FITT9L-45A45V	0204003
5	1	FITT9L-52A52A	0303023
6	2	FITT9L-18A18A	0303024
7	1	FITT9L-16A16A	0303025
8	2	FITT9S-52V45A	0303026
9	2	FITT9T-18A18V18A	0303027
10	1	FITT9S-08R22A	0307002
11	2	FITT9S-16S30A	0307003
12	1	Breather	100.455
13	2	FITT2S-08P08P	100.705
14	2	FITT2S-16P06Q	100.715
15	2	FITT2L-04P06M	100.717
16	2	FITT2C-08Q	100.727
17	2	FITT2P-08R	100.903
18	2	FITT2S-06P04Q	110.369
19	1	Splitflange kit	140.261
20	1	Breather	790.524
21	1	Fluid level temp	790.769
22	2	FITT9S-08P22A	9111022
23	2	Ball valve 1/2"	9307002
24	2	FITT2P-12P	9308056
25	2	FITT2P-16P	9308057
26	2	FITT9S-22A12P	9403014
27	2	FITT9S-16A06P	9403018
28	1	FITT2L-06M08R	9410002
29	2	FITT2P-24S	9607007
30	4	FITT9S-24S45A	9609011
31	1	FITT2P-08P	9612032
32	1	FITT9T-52A52V52A	9704042
33	1	FITT2S-06M08R	9805012
34	2	FITT9S-04S16A	9809025
35	3	FITT9S-08S22A	9909012
36	4	FITT9S-08S18A	9909014
37	1	Check valve	9909039
38	1	FITT2S-12B12P	100.387
39	6	Gauge 0 – 600 bar	9507013

INTERNAL Adapters

   335RFB50

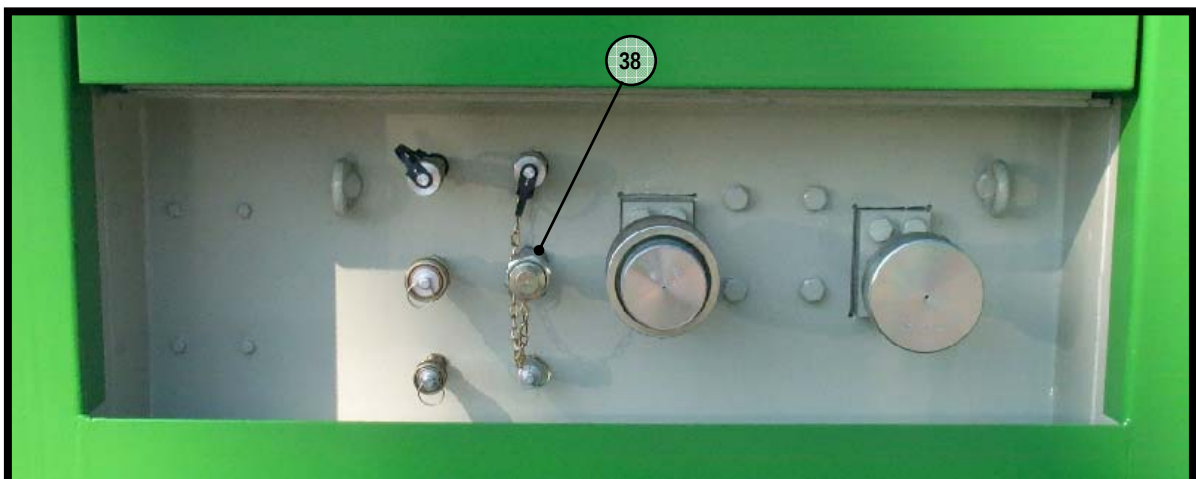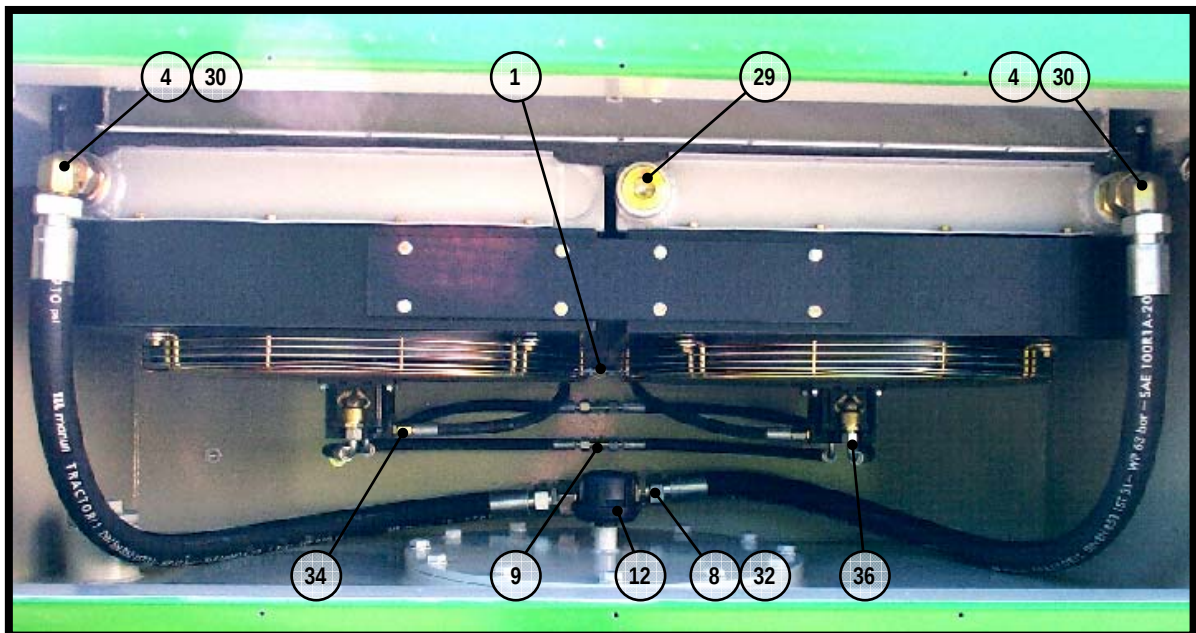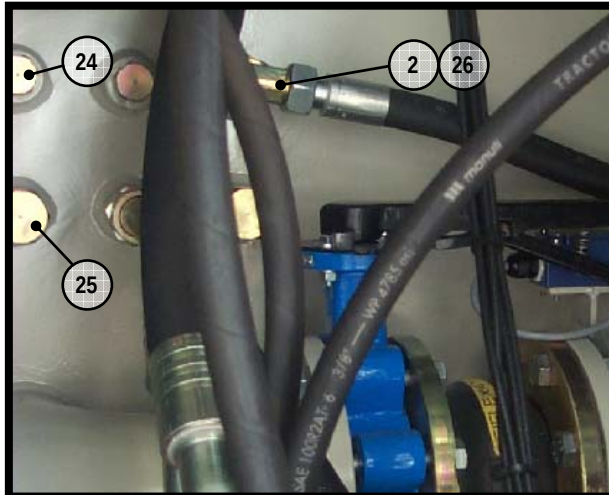

INTERNAL







Adapters

335RFB50

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part No.</u>
1	1	FITT9T-16A16V16A	0005058
2	2	FITT9L-30A30V	0005073
3	2	FITT9S-20P45A	0204002
4	4	FITT9L-45A45V	0204003
5	1	FITT9L-52A52A	0303023
6	2	FITT9L-18A18A	0303024
7	1	FITT9L-16A16A	0303025
8	2	FITT9S-52V45A	0303026
9	2	FITT9T-18A18V18A	0303027
10	1	FITT9S-08R22A	0307002
11	2	FITT9S-16S30A	0307003
12	1	Breather	100.455
13	2	FITT2S-08P08P	100.705
14	2	FITT2S-16P06Q	100.715
15	2	FITT2L-04P06M	100.717
16	2	FITT2C-08Q	100.727
17	2	FITT2P-08R	100.903
18	2	FITT2S-06P04Q	110.369
19	1	Splitflange kit	140.261
20	1	Breather	790.524
21	1	Fluid level temp	790.769
22	2	FITT9S-08P22A	9111022
23	2	Ball valve 1/2"	9307002
24	2	FITT2P-12P	9308056
25	2	FITT2P-16P	9308057
26	2	FITT9S-22A12P	9403014
27	2	FITT9S-16A06P	9403018
28	1	FITT2L-06M08R	9410002
29	2	FITT2P-24S	9607007
30	4	FITT9S-24S45A	9609011
31	1	FITT2P-08P	9612032
32	1	FITT9T-52A52V52A	9704042
33	1	FITT2S-06M08R	9805012
34	2	FITT9S-04S16A	9809025
35	3	FITT9S-08S22A	9909012
36	4	FITT9S-08S18A	9909014
37	1	Check valve	9909039
38	1	FITT2S-12B12P	100.387
39	6	Gauge 0 – 600 bar	9507013

DRIVE PUMP

      335RF0C0

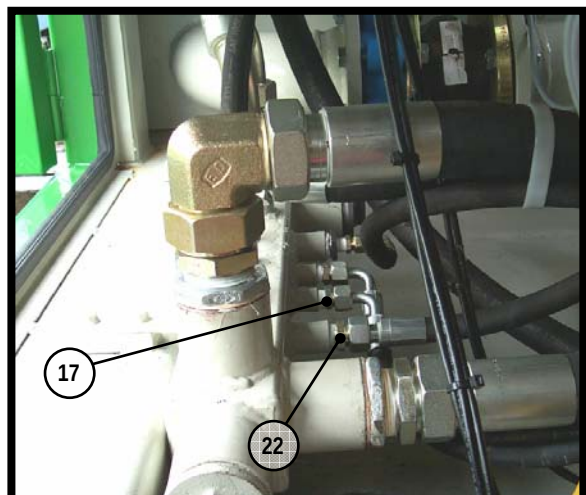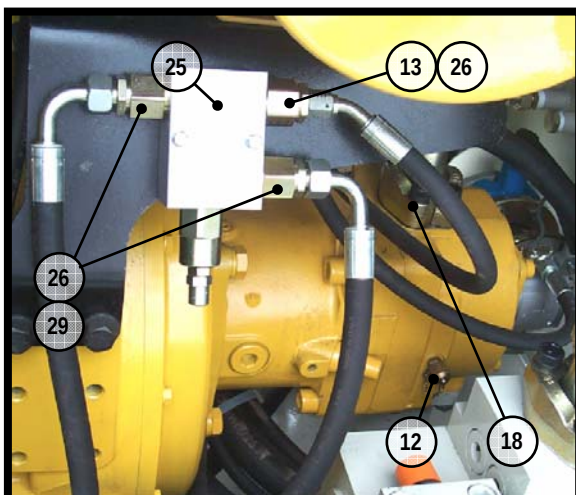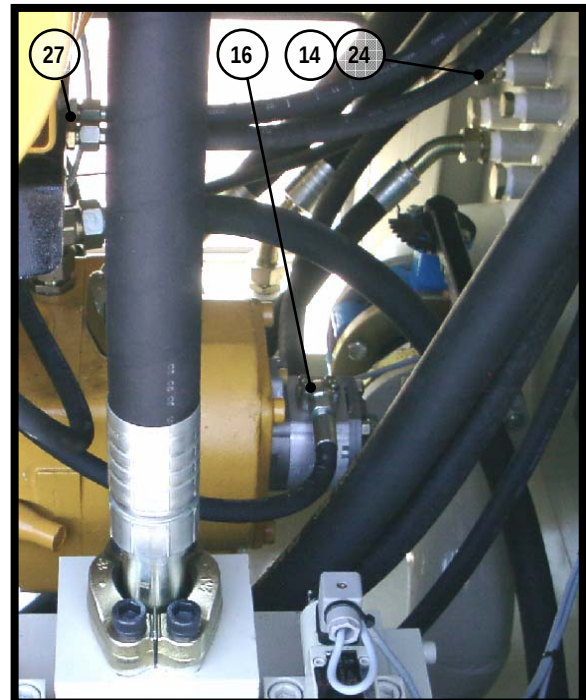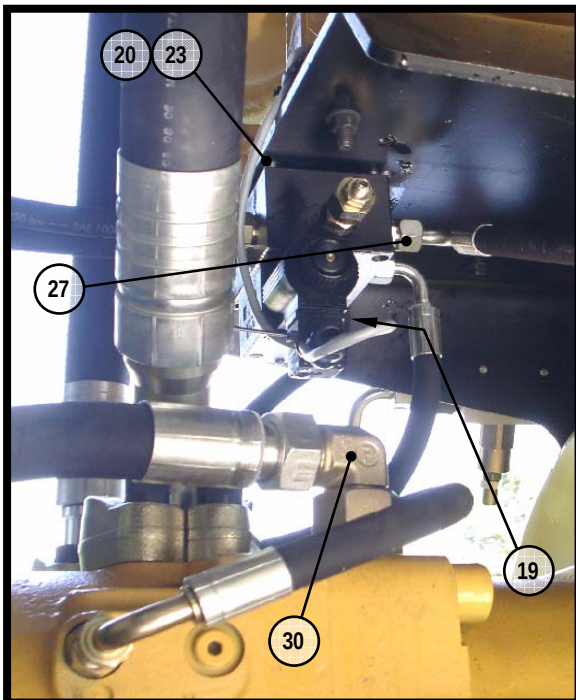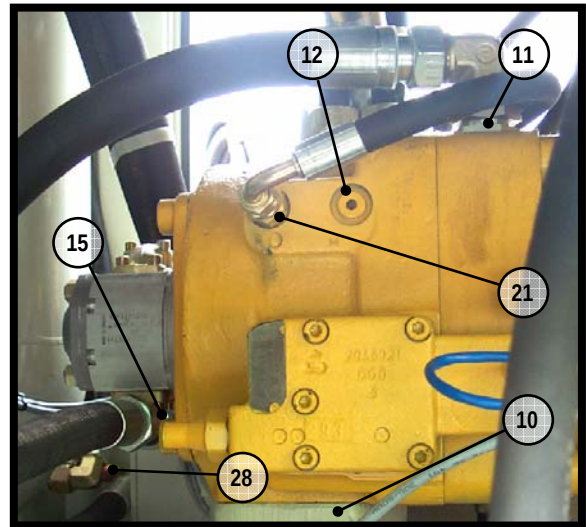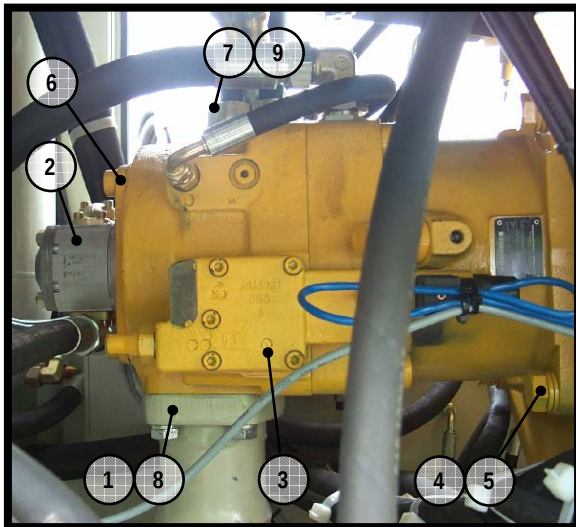

DRIVE PUMP

335RF0C0

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part. No.</u>
1	1	O-ring	0005056
2	1	Steering pump	0010003
3	1	Adjustable pump	0208007
4	1	Drive coupling	0211048
5	1	Pump adapter flange	0211049
6	1	Steering pump flange	0305041
7	1	O-ring	110.119
8	4	SHCS M16 x 50	790.369
9	4	SHCS M16 x 55	9911038




ADAPTERS

335RFC50

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part No.</u>
10	1	Welding flange	0005055
11	1	FITT9S-33U36A	0005057
12	2	Measure coupling M12X1,5	0005059
13	1	FITT9S-08S16A	0005060
14	1	FITT9L-30A30V	0005073
15	1	Elbow flange	0301011
16	1	Elbow flange	0302002
17	1	FITT9S-06P18A	0303029
18	1	Split flange kit	110.033
19	1	Measure coupling 1/4"BSP	790.909
20	1	FITT2P-02S	791.143
21	1	FITT9S-14A16A	9109041
22	1	FITT9S-08P22A	9111022
23	2	FITT2P-08S	9203011
24	1	FITT9S-22A12P	9403014
25	1	Measure coupling 1/4"NPT	9506002
26	3	FITT2S-12S08G	9507015
27	4	FITT9S-06S18A	9609008
28	1	FITT9L-16P36A	9701014
29	2	FITT9S-08S22A	9909012
30	1	FITT9L-36A36V	9909027

DRIVE MANIFOLD

   335RF0D0

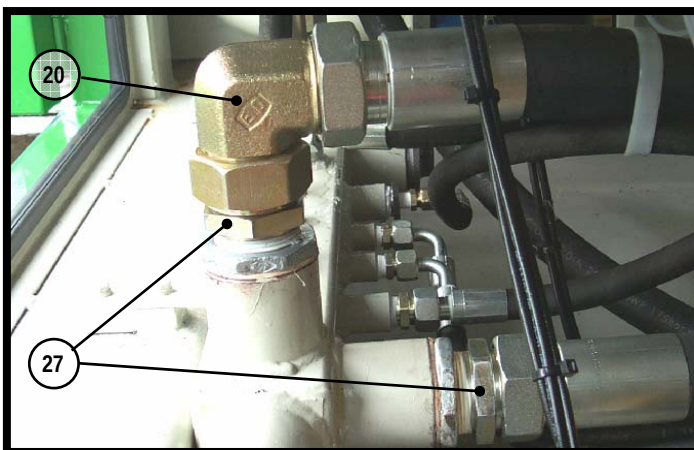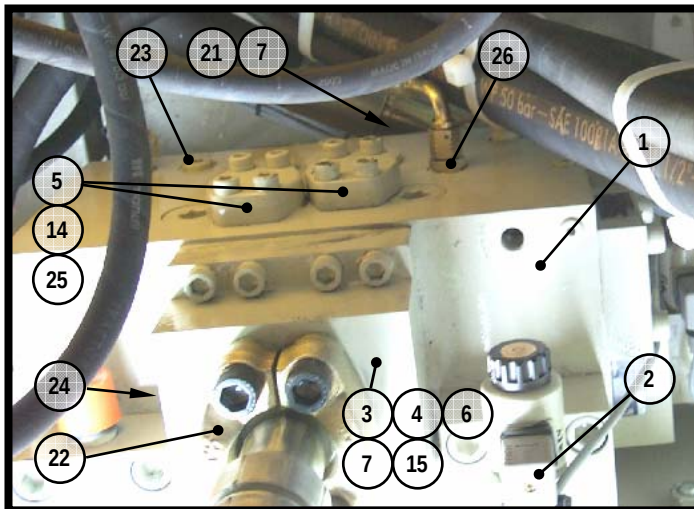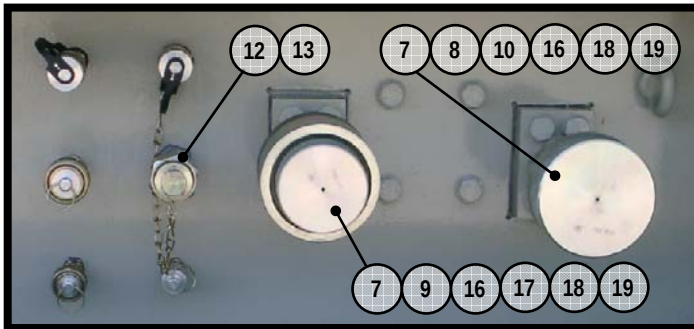

DRIVE MANIFOLD

335RF0D0

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part No.</u>
1	1	Manifold	0002201
2	4	Pin bushing (4 pins)	0105013
3	1	Distribution manifold.	0211101
4	4	O-Ring #219	100.091
5	2	O-Ring #214	100.097
6	8	SHCS M12 x 55	100.507
7	5	O-ring	110.119
8	1	Male disconnect 1 1/2"	110.690
9	1	Female disconnect 1 1/2"	110.692
10	1	Dust cap 1 1/2"	110.955
11	1	Dust plug 1 1/2"	110.957
12	1	Female disconnect 3/4"	400.095
13	1	Dust plug 3/4"	400.121
14	8	SHCS M10 x 30	790.066
15	4	SHCS M16 x 50	790.369
16	2	Coup. adap. 24P 6000 psi	9503104
17	2	O-ring	110.829
18	2	Backup ring	110.980
19	2	Insert kit	850.067







ADAPTERS

335RFD50

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part No.</u>
20	1	FITT9L-52A52V	0005081
21	2	Splitflange kit #24 3000	100.596
22	1	Split flange kit	110.033
23	1	FITT2P-06S	791.104
24	2	FITT2P-16S	791.277
25	2	Solid flange 3/4"-6000	9703011
26	1	FITT9S-06S16A	9802057
27	2	FITT9S-24P52A	9811030

CLAMP/RF MANIFOLD

      335RF0E0

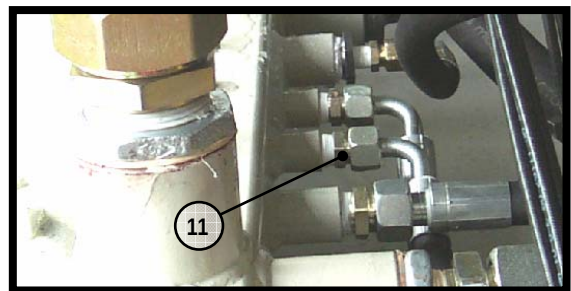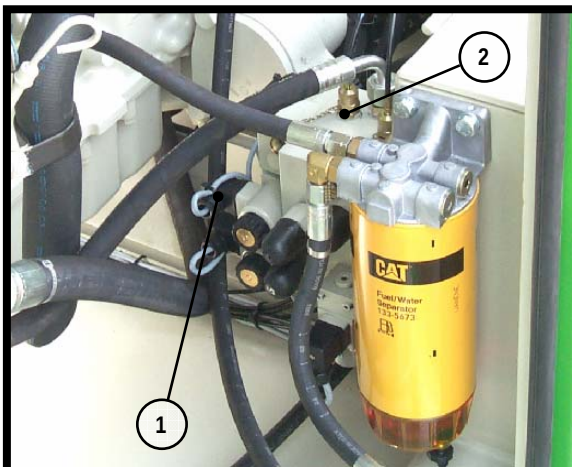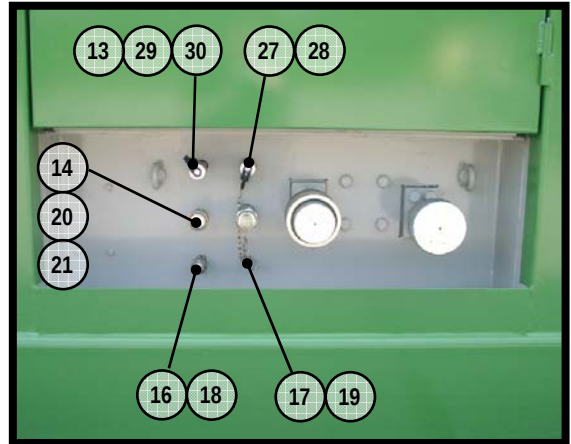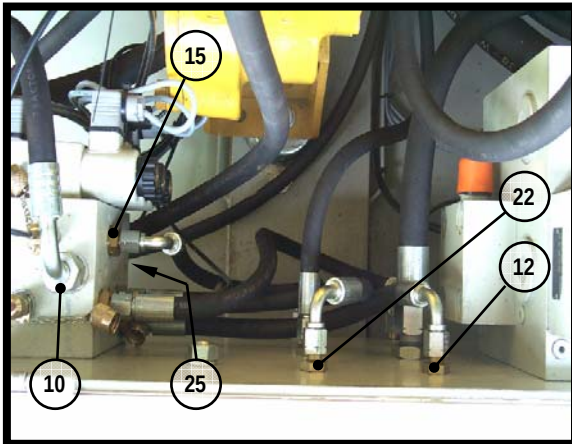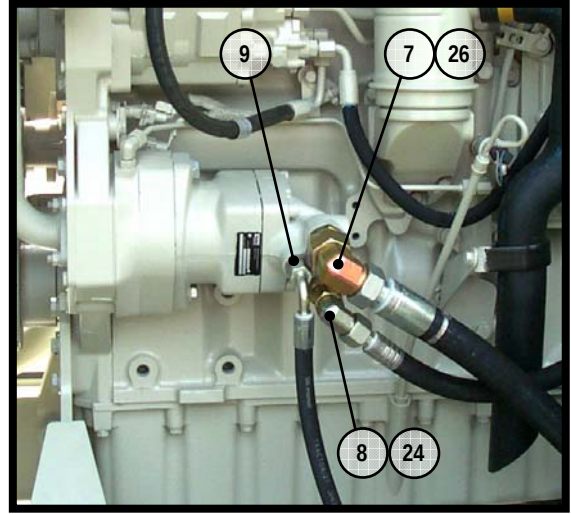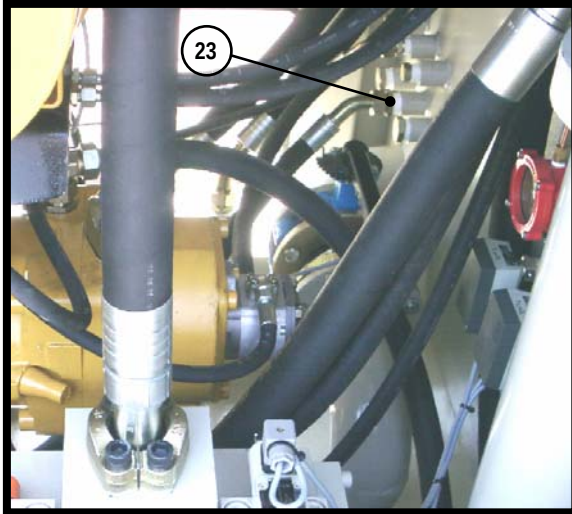

ADAPTERS CLAMP/RF MANIFOLD

335RF0E0

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part. No.</u>
1	5	Pin bushing (4 pins)	0105013
2	1	Clamp/RF manifold	0303203
3	1	Male disconnect 3/8"	100.245
4	1	Dust cap 3/8"	100.257
5	1	Dust plug 3/8"	100.737
6	1	Female disconnect 3/8"	100.777




ADAPTERS

335RFE50

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part. No.</u>
7	1	FITT9S-36A12R	0005061
8	1	FITT9S-24C12R	0005062
9	1	FITT9S-18A06R	0005063
10	1	FITT9S-08S24C	0005070
11	2	FITT9S-06P18A	0303029
12	1	FITT2S-12B12P	100.387
13	1	FITT2S-06Q06Q	110.143
14	1	FITT2S-06Q08P	400.357
15	4	FITT2S-06S06M	795.087
16	1	Female disconnect 3/8"	9404007
17	1	Male disconnect 3/8"	9404008
18	1	Dust plug 3/8"	9404009
19	1	Dust cap 3/8"	9404010
20	1	Female disconnect 1/2"	9406013
21	1	Dust plug 1/2"	9406015
22	5	FITT2S-06B06P	9406017
23	1	FITT9L-16P36A	9701014
24	1	FITT9L-24C24Y	9903030
25	1	FITT9S-08S22A	9909012
26	1	FITT9L-36A36V	9909027
27	1	Male disconnect 3/8"	100.245
28	1	Dust cap 3/8"	100.257
29	1	Coupler 3/8"	100.777
30	1	Dust plug 3/8"	100.737

HYDRAULIC HOSES

   335RF060

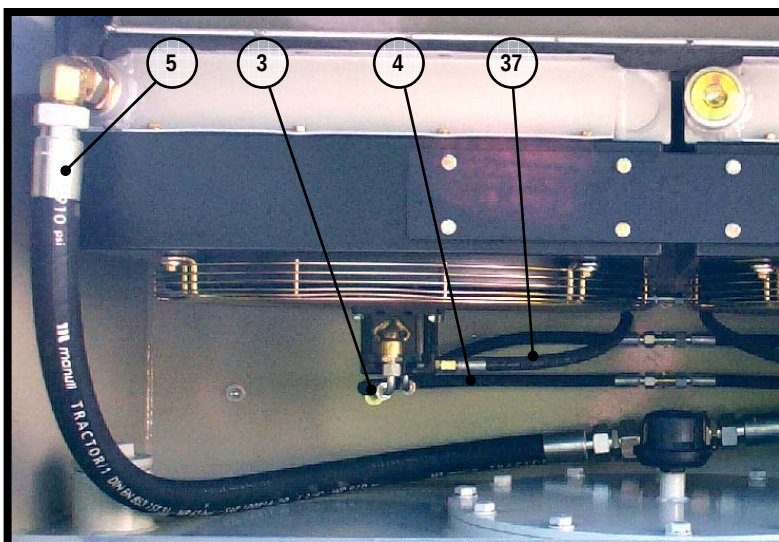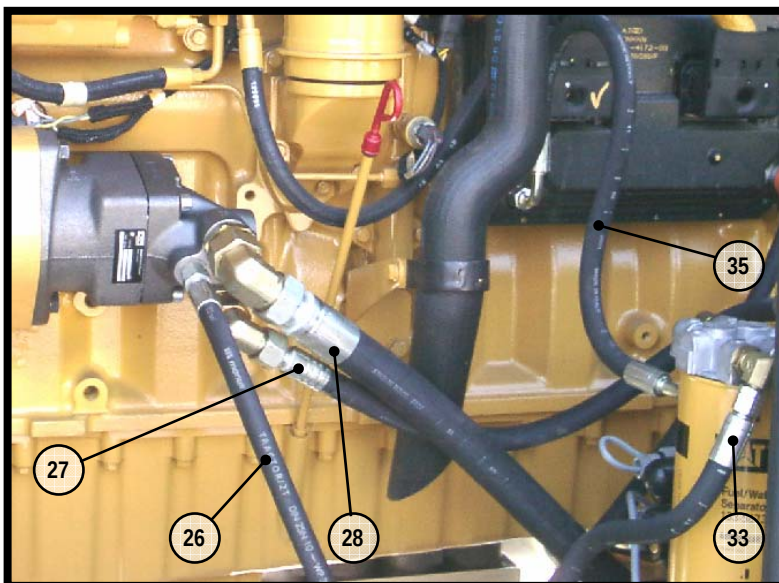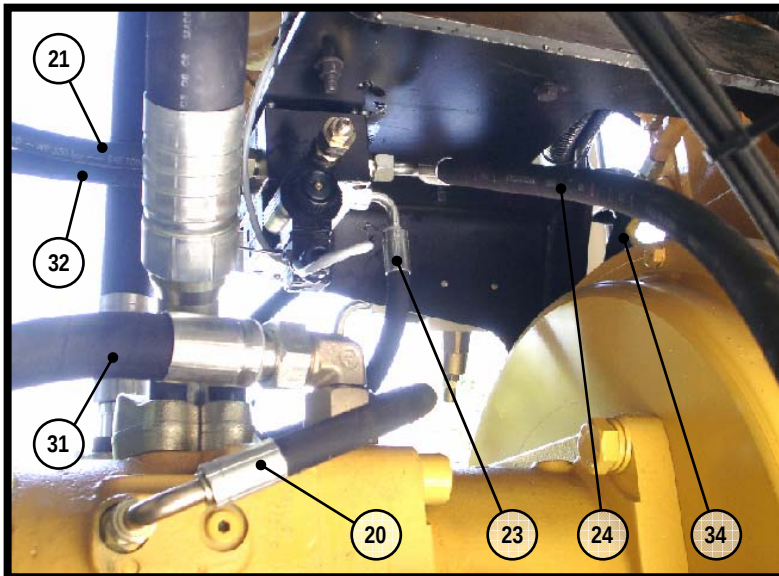


HYDRAULIC HOSES

335RF060

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part. No.</u>
1	1	HOSE038R02J906J006L02720	0201006
2	1	HOSE038R02J906J906L02200	0306003
3	2	HOSE038R02V018V918L02680	0306004
4	2	HOSE038R02V018V918L02040	0306005
5	2	HOSE125R02V045V045L05120	0306006
6	2	HOSE038R02J006J906L01490	0306007
7	1	HOSE150R02F924V052L03940	0306008
8	1	HOSE150R02F924V052L06770	0306009
9	1	HOSE150R02F932V052L06770	0306010
10	2	HOSE125R02V045V445L06300	0306011
11	1	HOSE038R02V016V916L04640	0306012
12	1	HOSE150PT4H024H424L06540	0306013
13	1	HOSE050R02V022P008L05900	0306014
14	1	HOSE050R02V022V922L09950	0306015
15	1	HOSE050R02V922P008L05900	0306016
16	1	HOSE050R02V022V922L03940	0306017
17	1	HOSE038R02J006V918L04920	0306018
18	1	HOSE050R02V922V022L03150	0306019
19	1	HOSE050R02V922V022L05120	0306020
20	1	HOSE038R02V016V416L03540	0306021
21	1	HOSE038R02V018V018L03350	0306022
22	1	HOSE038R02V016V016L06340	0306023
23	1	HOSE038R02V918V018L02320	0306024
24	1	HOSE038R02V918V018L03620	0306025
25	1	HOSE100R02V030V030L02160	0306026
26	1	HOSE038R02V918V018L08660	0306027
27	1	HOSE050PT4Y924Y024L01970	0306028
28	1	HOSE100R02V436V036L08110	0306029
29	1	HOSE075R02V030V930L05510	0306030
30	1	HOSE075R02J012V930L06380	0306031
31	1	HOSE100R02V030V930L04800	0306032
32	1	HOSE038R02V018V018L03540	0306037
33	1	HOSE038R02J006J006L01350	795.042
34	1	HOSE038R02J006J006L04550	9305003
35	1	HOSE038R02J006J006L01200	9601010
36	6	Measure hose L=300cm	9612006
37	2	HOSE038R02V016V916L01700	9810016

HYDRAULIC HOSES

 335RF060

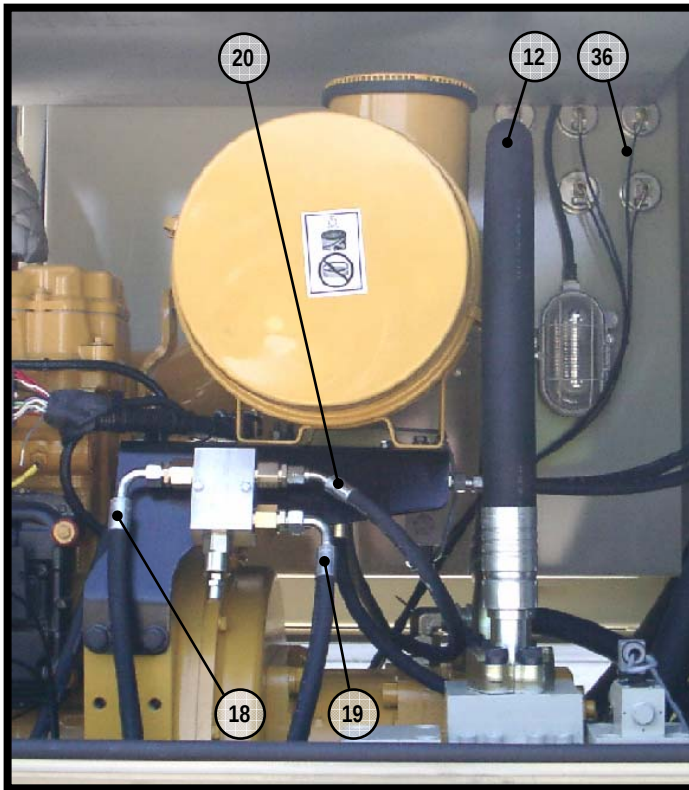



HYDRAULIC HOSES

335RF060

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part. No.</u>
1	1	HOSE038R02J906J006L02720	0201006
2	1	HOSE038R02J906J906L02200	0306003
3	2	HOSE038R02V018V918L02680	0306004
4	2	HOSE038R02V018V918L02040	0306005
5	2	HOSE125R02V045V045L05120	0306006
6	2	HOSE038R02J006J906L01490	0306007
7	1	HOSE150R02F924V052L03940	0306008
8	1	HOSE150R02F924V052L06770	0306009
9	1	HOSE150R02F932V052L06770	0306010
10	2	HOSE125R02V045V445L06300	0306011
11	1	HOSE038R02V016V916L04640	0306012
12	1	HOSE150PT4H024H424L06540	0306013
13	1	HOSE050R02V022P008L05900	0306014
14	1	HOSE050R02V022V922L09950	0306015
15	1	HOSE050R02V922P008L05900	0306016
16	1	HOSE050R02V022V922L03940	0306017
17	1	HOSE038R02J006V918L04920	0306018
18	1	HOSE050R02V922V022L03150	0306019
19	1	HOSE050R02V922V022L05120	0306020
20	1	HOSE038R02V016V416L03540	0306021
21	1	HOSE038R02V018V018L03350	0306022
22	1	HOSE038R02V016V016L06340	0306023
23	1	HOSE038R02V918V018L02320	0306024
24	1	HOSE038R02V918V018L03620	0306025
25	1	HOSE100R02V030V030L02160	0306026
26	1	HOSE038R02V918V018L08660	0306027
27	1	HOSE050PT4Y924Y024L01970	0306028
28	1	HOSE100R02V436V036L08110	0306029
29	1	HOSE075R02V030V930L05510	0306030
30	1	HOSE075R02J012V930L06380	0306031
31	1	HOSE100R02V030V930L04800	0306032
32	1	HOSE038R02V018V018L03540	0306037
33	1	HOSE038R02J006J006L01350	795.042
34	1	HOSE038R02J006J006L04550	9305003
35	1	HOSE038R02J006J006L01200	9601010
36	6	Measure hose L=300cm	9612006
37	2	HOSE038R02V016V916L01700	9810016

HYDRAULIC HOSES

  335RF060

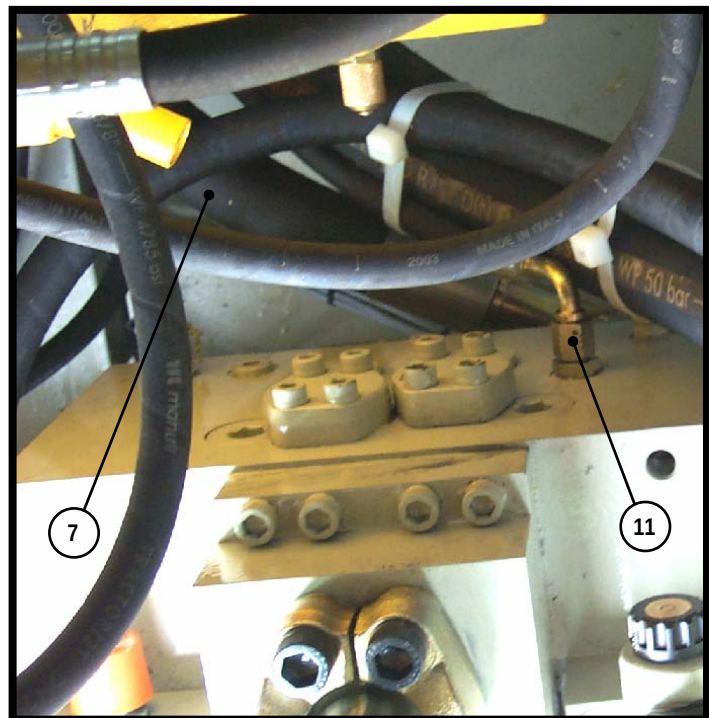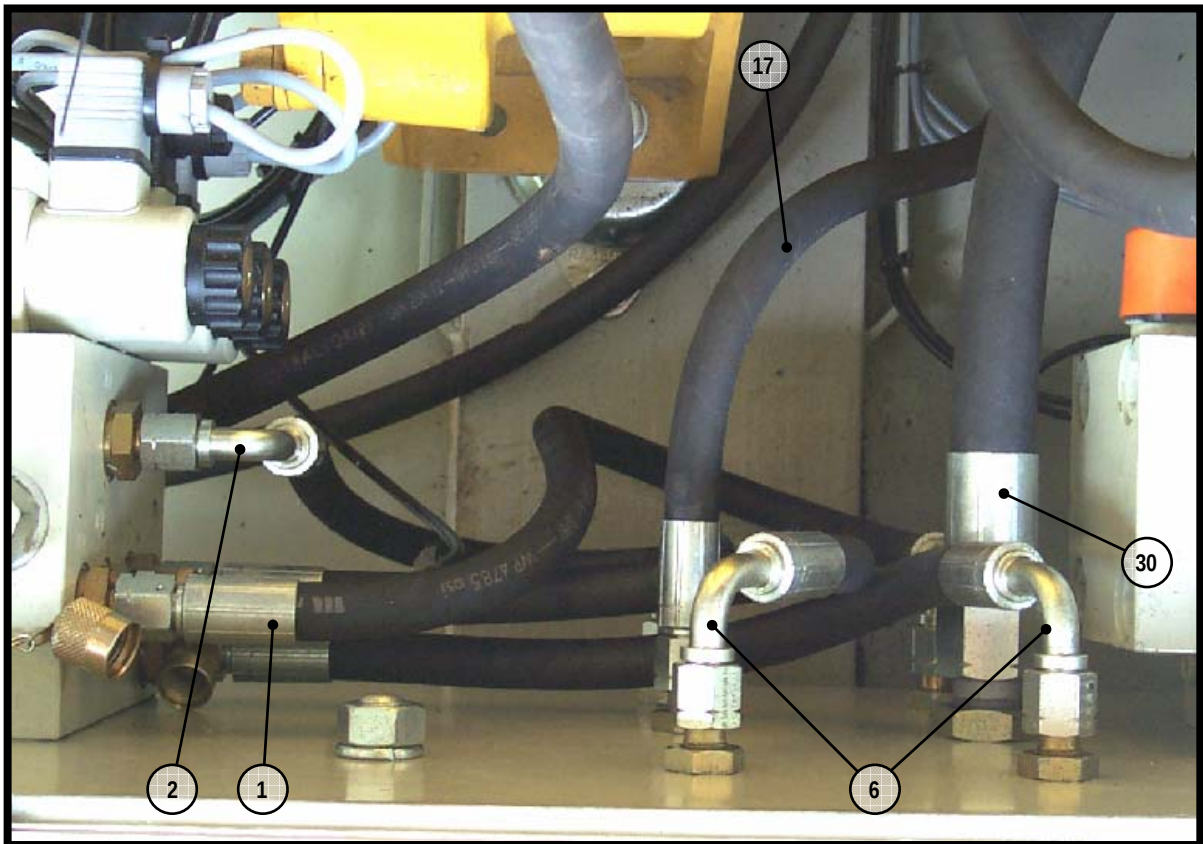



HYDRAULIC HOSES

335RF060

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part. No.</u>
1	1	HOSE038R02J906J006L02720	0201006
2	1	HOSE038R02J906J906L02200	0306003
3	2	HOSE038R02V018V918L02680	0306004
4	2	HOSE038R02V018V918L02040	0306005
5	2	HOSE125R02V045V045L05120	0306006
6	2	HOSE038R02J006J906L01490	0306007
7	1	HOSE150R02F924V052L03940	0306008
8	1	HOSE150R02F924V052L06770	0306009
9	1	HOSE150R02F932V052L06770	0306010
10	2	HOSE125R02V045V445L06300	0306011
11	1	HOSE038R02V016V916L04640	0306012
12	1	HOSE150PT4H024H424L06540	0306013
13	1	HOSE050R02V022P008L05900	0306014
14	1	HOSE050R02V022V922L09950	0306015
15	1	HOSE050R02V922P008L05900	0306016
16	1	HOSE050R02V022V922L03940	0306017
17	1	HOSE038R02J006V918L04920	0306018
18	1	HOSE050R02V922V022L03150	0306019
19	1	HOSE050R02V922V022L05120	0306020
20	1	HOSE038R02V016V416L03540	0306021
21	1	HOSE038R02V018V018L03350	0306022
22	1	HOSE038R02V016V016L06340	0306023
23	1	HOSE038R02V918V018L02320	0306024
24	1	HOSE038R02V918V018L03620	0306025
25	1	HOSE100R02V030V030L02160	0306026
26	1	HOSE038R02V918V018L08660	0306027
27	1	HOSE050PT4Y924Y024L01970	0306028
28	1	HOSE100R02V436V036L08110	0306029
29	1	HOSE075R02V030V930L05510	0306030
30	1	HOSE075R02J012V930L06380	0306031
31	1	HOSE100R02V030V930L04800	0306032
32	1	HOSE038R02V018V018L03540	0306037
33	1	HOSE038R02J006J006L01350	795.042
34	1	HOSE038R02J006J006L04550	9305003
35	1	HOSE038R02J006J006L01200	9601010
36	6	Measure hose L=300cm	9612006
37	2	HOSE038R02V016V916L01700	9810016

CONTROL PANEL

  335RF0H0

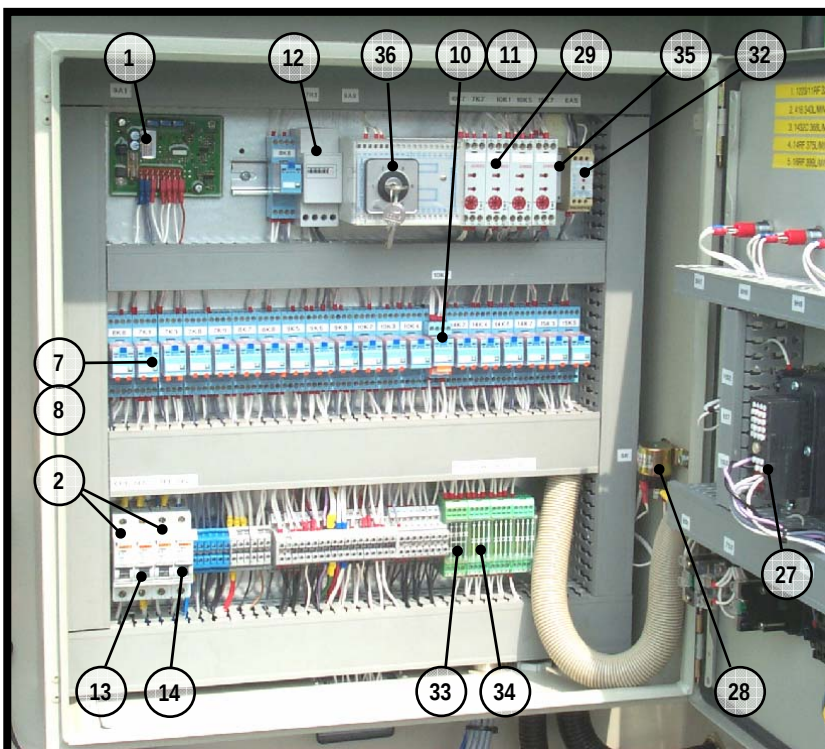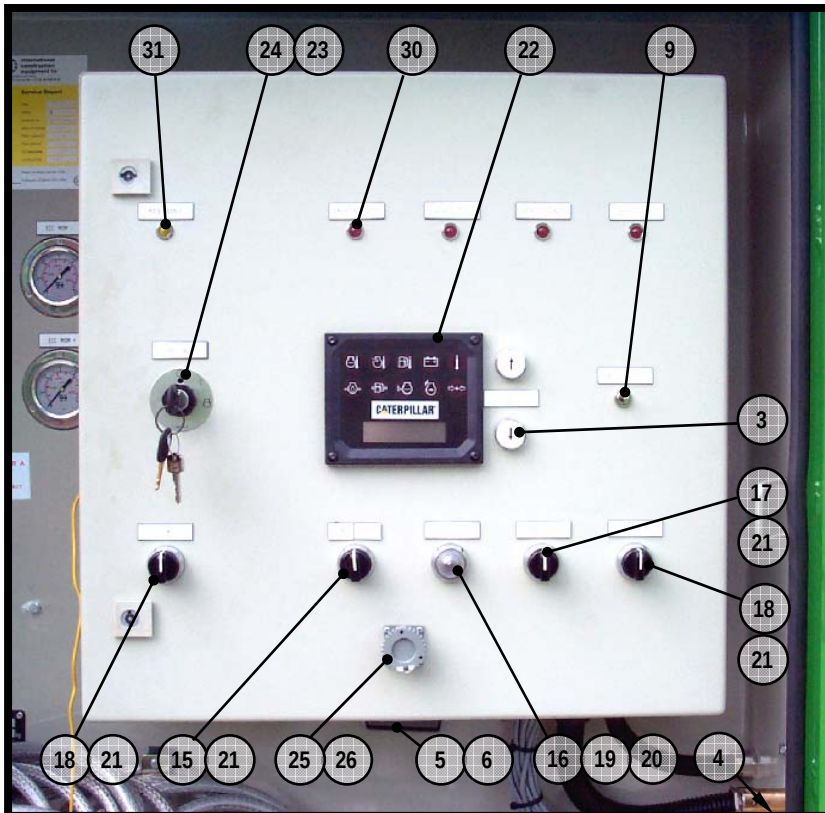

CONTROL PANEL

335RF0H0


<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part No.</u>
1	1	Amplifier	0011001
2	2	Circuit breaker	0301016
3	2	Scroll switch	0303016
4	1	Earth switch	790.924
5	1	Female coupler housing	9408009
6	1	Plug female (16 pins)	9408010
7	20	Relay mounting plate	9411023
8	20	Relay	9411024
9	1	Toggle switch	9504004
10	1	Relay	9512026
11	1	Relay mounting plate	9512027
12	1	Hour meter (vibro)	9606002
13	1	Circuit breaker	9711031
14	1	Circuit breaker	9711032
15	1	Clamp switch	9810046
16	1	Clamp light	9810047
17	1	For/Rev switch	9810055
18	2	Switch -/+	9810056
19	1	Bulb	9810062
20	1	Lens	9810047
21	7	Contact block	9810054
22	1	EMS	0212007
23	1	Starter switch	0306040
24	1	Key	0306041
25	1	Customer connector	0305009
26	1	Dust plug	0305010
27	1	Connector EMS	0307008
28	1	Starter relay	0110002
29	1	Time relay	0304007
30	1	Warning Light red	0305015
31	1	Warning Light yellow	0305016
32	1	Speed switch	0305017
33	1	Diode block (7 pcs)	0306038
34	3	Diode block (4 pcs)	0306039
35	1	Time relays	0307007

OPTION

36	1	Key switch	0310071
----	---	------------	---------

REMOTE CONTROL CABLE

 335RF0J1

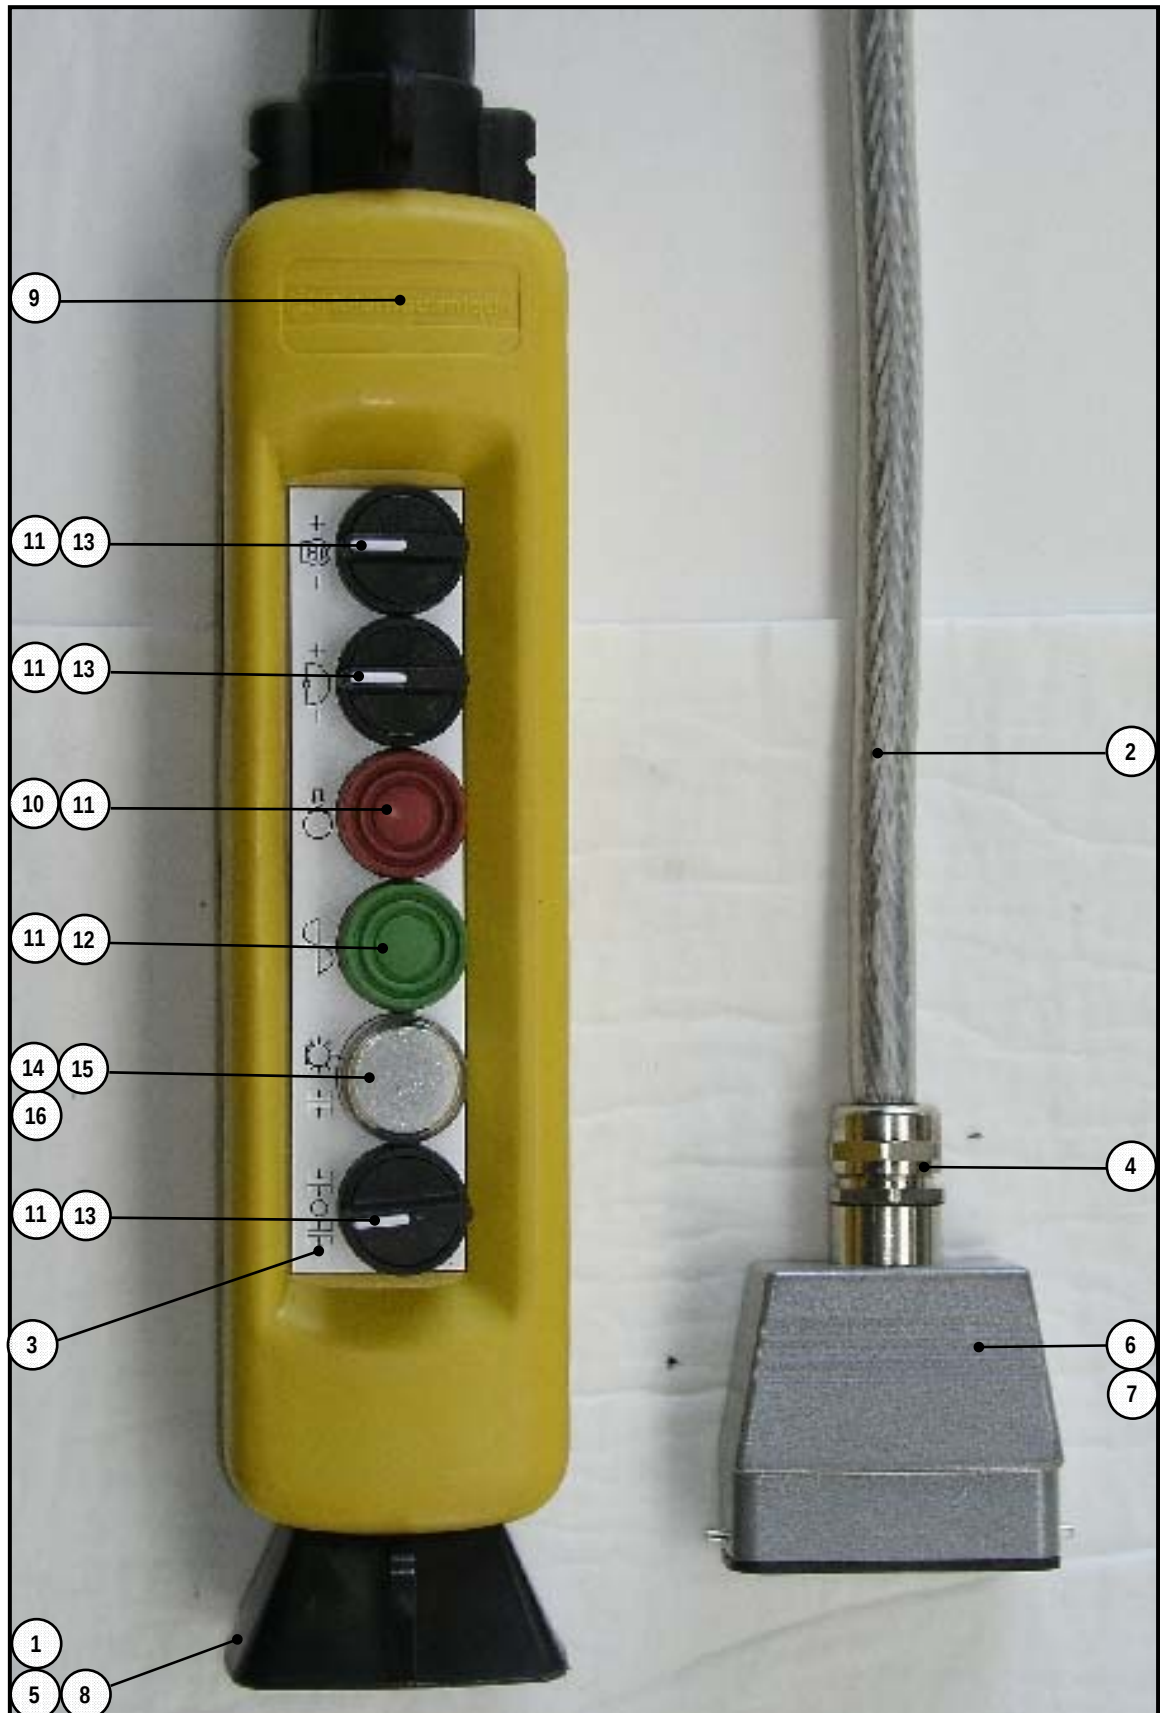

REMOTE CONTROL


Cable

335RF0J1

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part. No.</u>
1	1	Contact block	0202013
2	15	Remote control cable	0407004
3	1	Name plate	0407005
4	1	Strain relief	0506014
5	1	Emergency stop button	9407035
6	1	Male coupler housing	9408007
7	1	Plug male (16 pins)	9408008
8	1	Protective guard	9410001
9	1	Remote control box	9506030
10	1	Stop button	9506033
11	8	Element	9506035
12	1	Start button	9506037
13	3	Switch -/+	9506051
14	1	Bulb	9506053
15	1	Lens	9506054
16	1	Clamp light	9506055

REMOTE CONTROL WIRELESS

 9808203

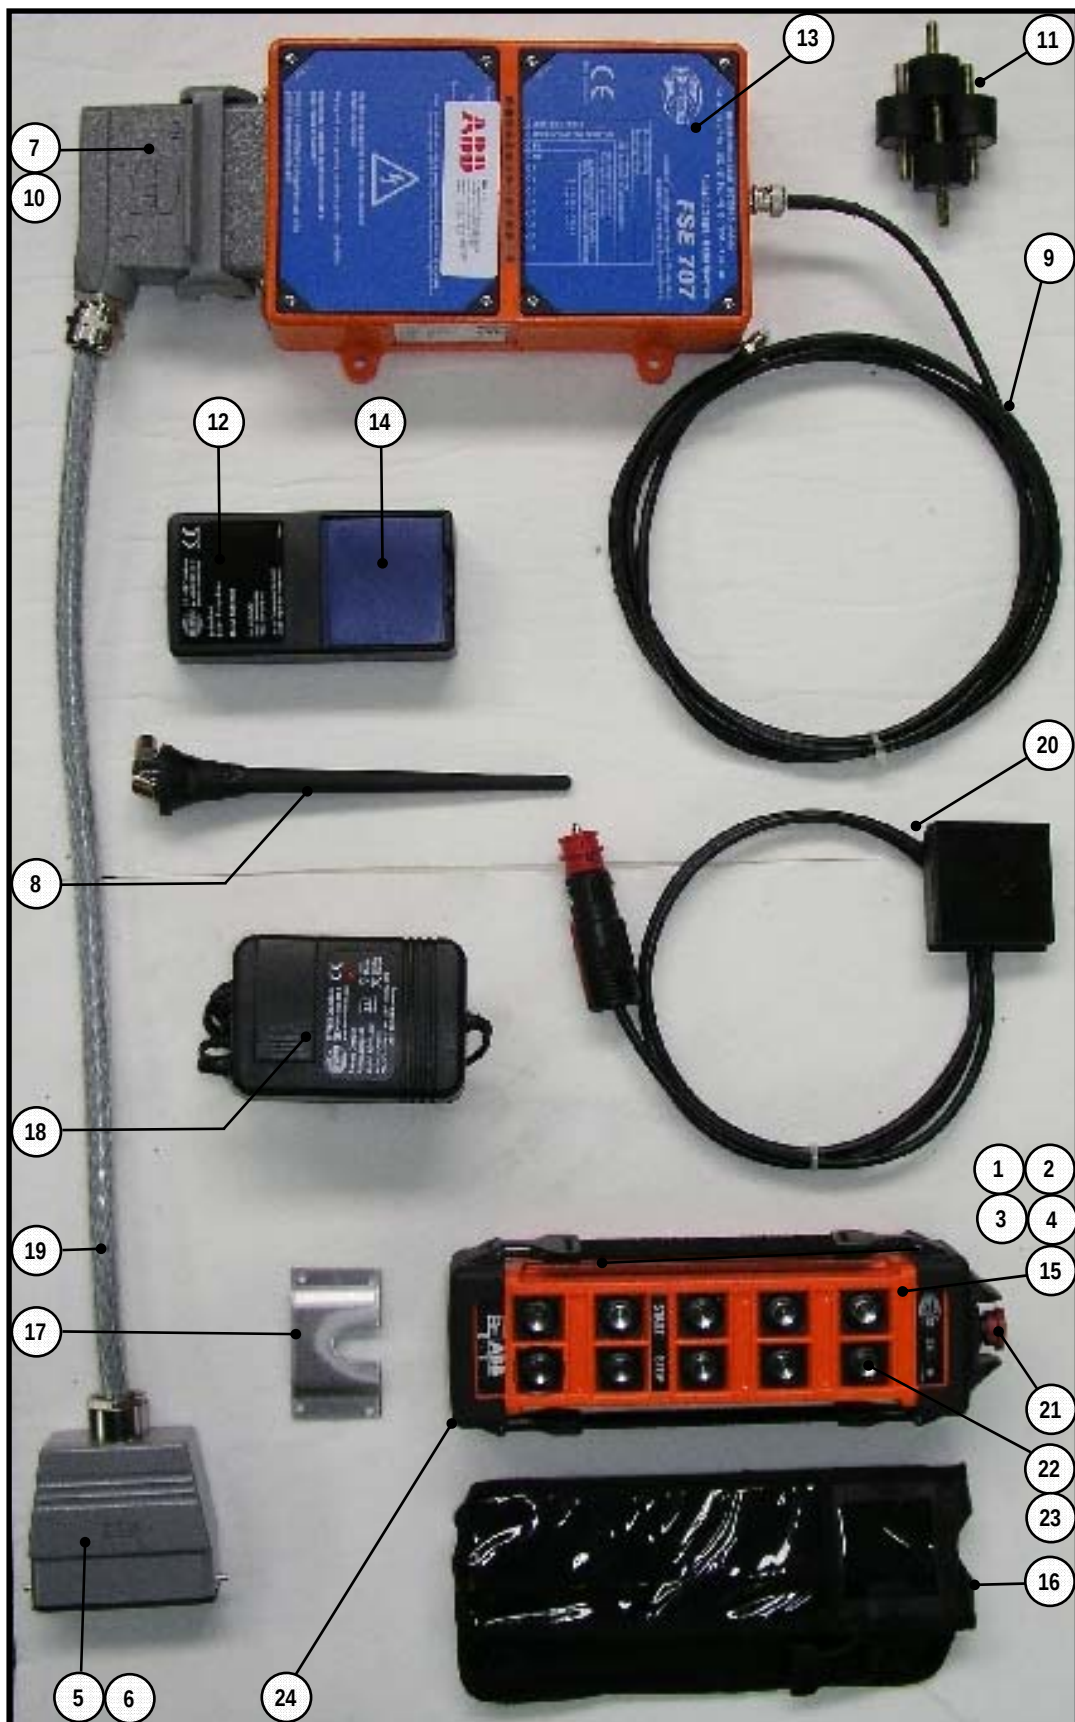

REMOTE CONTROL


WIRELESS

9808203

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part. No.</u>
1	1	Text plate	0211039
2	1	Text plate	0211040
3	1	Text plate	0211041
4	1	Text plate	0211042
5	1	Male coupler housing	9408007
6	1	Plug male (16 pins)	9408008
7	1	Male coupler housing	0202008
8	1	Antenna	0308001
9	1	Coax cable 3mtr	0308002
10	1	Plug female (16 pins)	9408010
11	4	Shock absorber	9601026
12	1	Battery compartment	0603013
13	1	Receiver (24Vdc)	9611030
14	2	Battery	0603016
15	1	Transmitter	9809014
16	1	Protection cover	9809015
17	1	Mounting plate	0402118
18	1	Charging adapter	0603014
19	1	Remote control cable	0407004
20	1	Adapter / battery	0603017
21	1	Emergency stop button	0603019
22	10	Push button	0603020
23	10	Seal push button	0603021
24	1	Body guard	0603022

HYDRAULIC CIRCUITRY

 Drive manifold

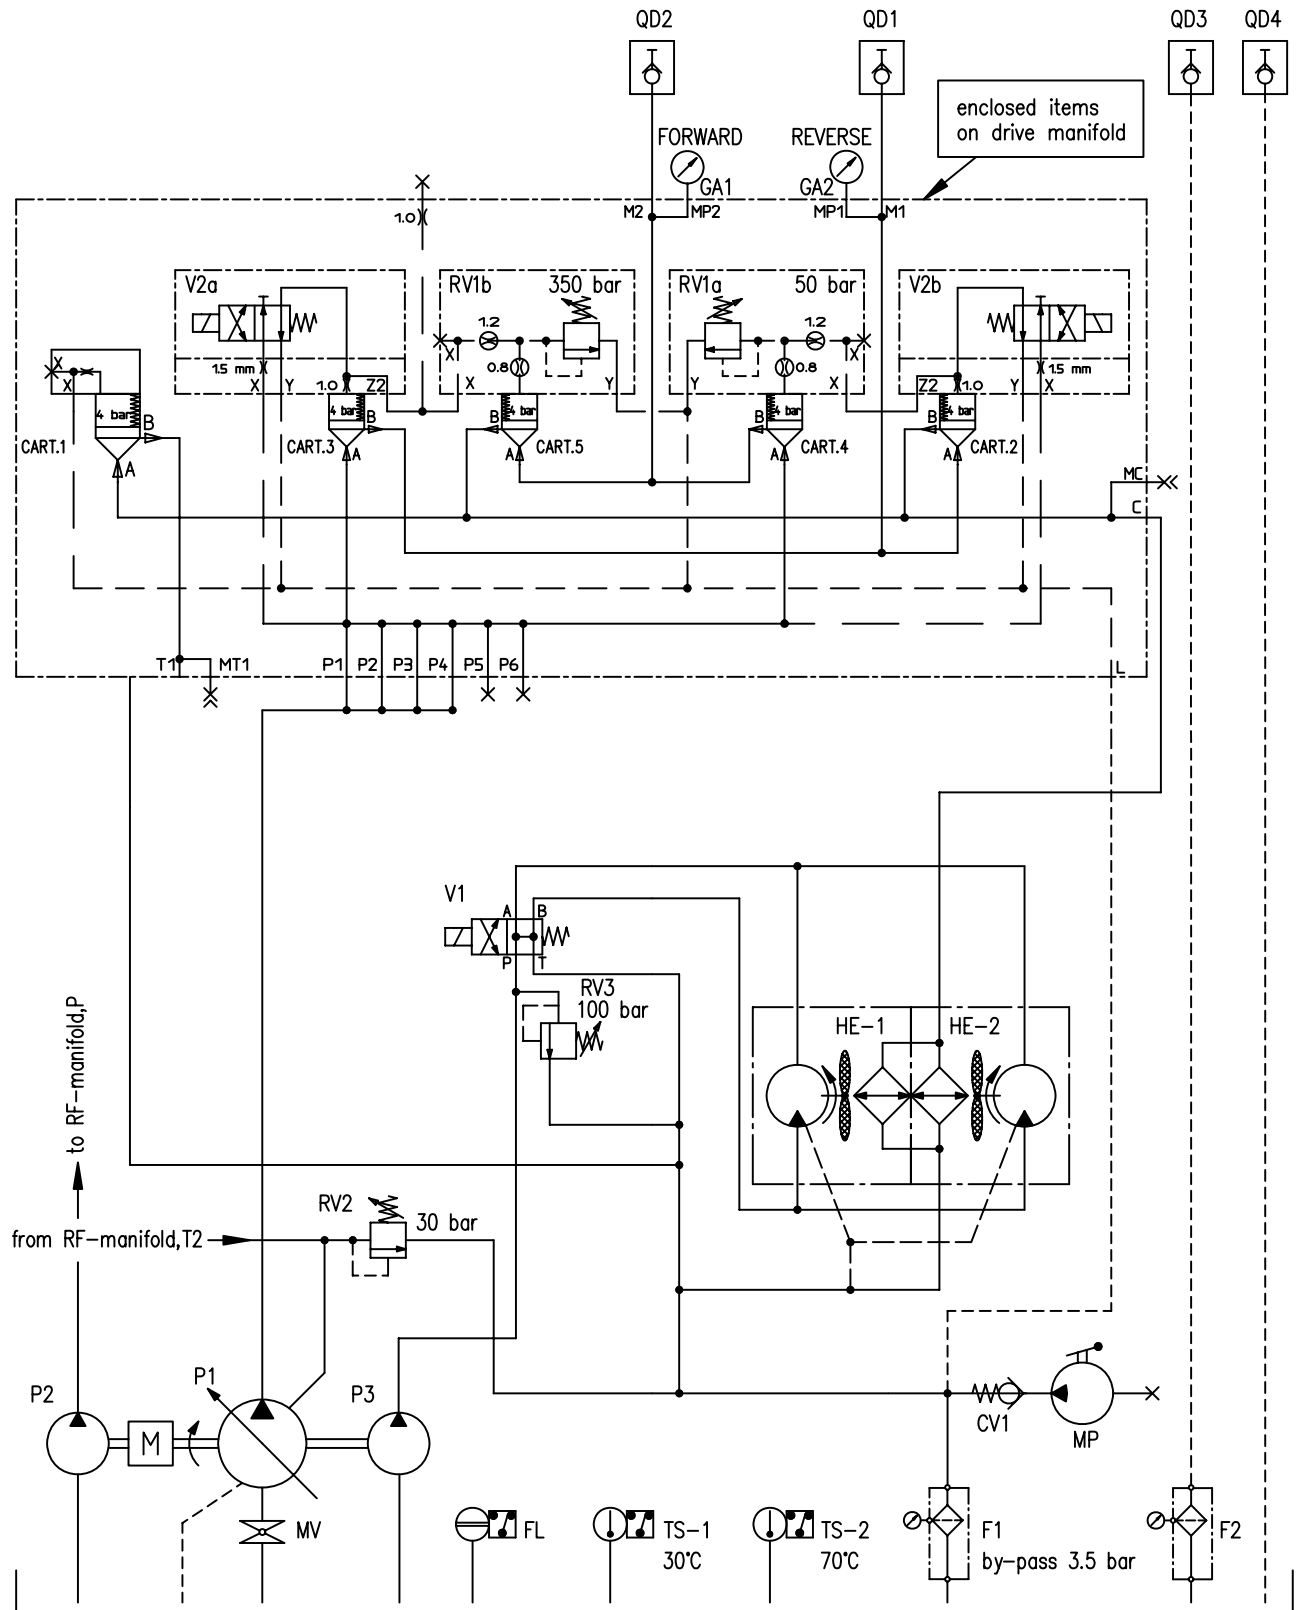


HYDRAULIC CIRCUITRY

Drive manifold

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part. No.</u>
CART.1	1	2/2 Cartridge	9611018
CART.2-5	4	2/2 Cartridge	9611013
CV1	1	Check valve	9909039
F1	1	Return filter	0211059
F2	1	Return filter leak-oil	0304010
FL	1	Fluid level switch	100.314
GA1,2	2	Gauge	9507013
HE-1, 2	2	Oilcooler	0211046
MP	1	Manual pump	9909009
MV	1	Manual valve	790.386
P1	1	Drive pump	0208007
P2	1	Clamp pump	9911004
P3	1	Fan pump	0010003
QD1	1	Quick disconnect	110.690
QD2	1	Quick disconnect	110.692
QD3	1	Quick disconnect	400.095
QD4	1	Quick disconnect	9406013
RV1a	1	Brake valve	9611014
RV1b	1	Relief valve	9611016
RV2	1	Relief valve	9911008
RV3	1	Relief valve	9906043
TS-1,2	2	Temperature switch	9810044
V1	1	Control valve	9501040
V2a,b	2	Control valve	9611016

HYDRAULIC CIRCUITRY

 RF manifold

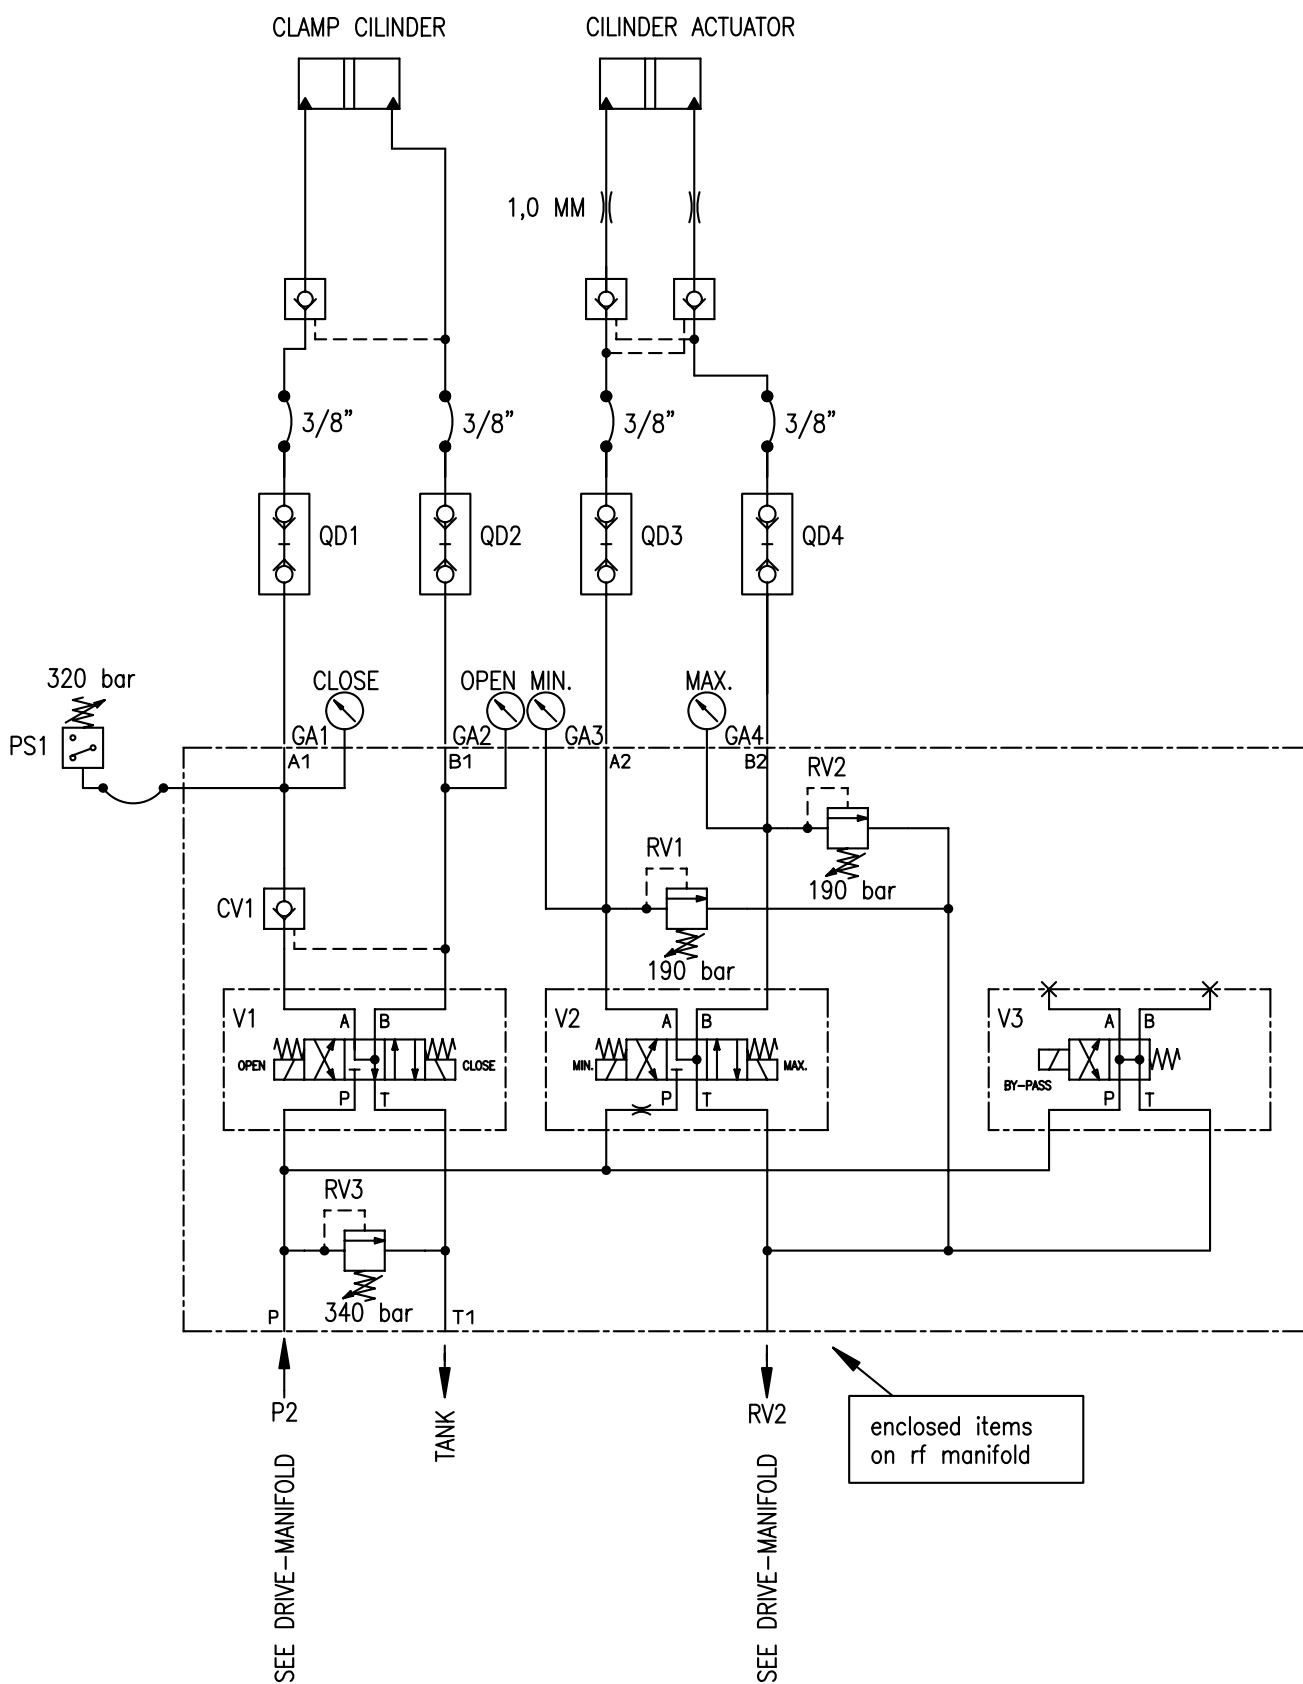

HYDRAULIC CIRCUITRY

RF manifold

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>Part. No.</u>
CV1	1	Check valve	9607023
GA1,2,3,4	4	Gauge	9507013
PS1	1	Pressure switch	9611020
QD1	1	Quick disconnect	100.245
QD2	1	Quick disconnect	100.777
QD3	1	Quick disconnect	9404007
QD4	1	Quick disconnect	9404008
RV1,2,3	3	Relief valve	9611022
V1,2	2	4/3 valve	9501039
V3	1	4/2 valve	9501040

ELECTRICAL CIRCUITRY

REFERENCE

DESCRIPTION

Part No.